# HYDRAULIC PRESSURE GAUGE

| Gauge Type | Model Number | Face Diameter (in) | Thread (in) | Pressure Range | | Graduation | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | | | (psi) | (bar) | Major Graduation (psi) | Minor Graduation (psi) | Major Graduation (bar) | Minor Graduation (bar) |
| Dry | GD2514 | 2.50 | ¼"-18NPTF | 0-10,000 | 0-700 | 1,000 | 200 | 100 | 10 |
| | GD4014 | 4.00 | | | | 2,000 | 100 | | |
| Wet | GW2514 | 2.50 | | | | 1,000 | 200 | | |
| | GW4014 | 4.00 | | | | 2,000 | 100 | | |

# PRESSURE & WEIGHT GAUGES

- Gauge indicates hydraulic pressure and weight
- Pressure and weight gauges can be ordered for all BVA cylinders
- Call if the cylinder is not listed

| Model Number | Gauge Type | Face Diameter (in) | Use with Cylinders | Thread |
|---|---|---|---|---|
| GW2514-0100LB | WET | 2.50 | H0501 THROUGH H0509 | 1/4" - 18NPTF |
| GW2514-0224LB | WET | 2.50 | H1001 THROUGH H1014, HD1010, HD1012 | 1/4" - 18NPTF |
| GW2514-0314LB | WET | 2.50 | H1501 THROUGH H1514 | 1/4" - 18NPTF |
| GW2514-0515LB | WET | 2.50 | H2501 THROUGH H2514 | 1/4" - 18NPTF |

# GAUGE ADAPTER

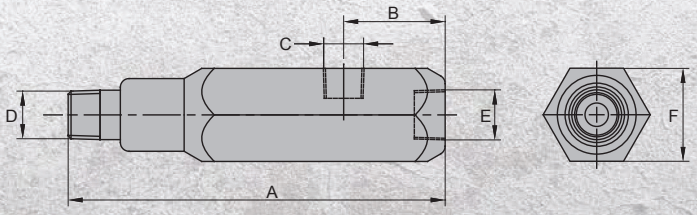


| Model Number | Dimensions (in) | | | | | |
|---|---|---|---|---|---|---|
| | A | B | C | D | E | F |
| CF3814 | 5.12 | 1.38 | ¼"-18NPTF | ⅜"-18NPTF | ⅜"-18NPTF | 1.25 |